



## 10yr O2NE & Safe-Ox User Manual

**Analox Ltd.**  
15 Ellerbeck Court, Stokesley Business Park  
North Yorkshire, TS9 5PT, UK  
**T:** +44 (0)1642 711400 **F:** +44 (0)1642 713900  
**W:** [www.analox.net](http://www.analox.net) **E:** [info@analox.net](mailto:info@analox.net)



**+44 7917  
764348**

This support line is closed on UK public holidays



## List of contents

1	Safety information .....	3
2	Package contents checklist .....	5
3	Overview.....	6
3.1	Partial pressure sensor .....	6
3.2	Setup.....	6
4	Installation of the product .....	7
4.1	Wall mounting .....	7
4.2	Wiring installation.....	7
4.3	AC supply models .....	7
4.4	DC supply models.....	7
4.5	Alarm repeaters .....	7
4.6	Alarm relay output models .....	9
4.7	Relay wiring .....	9
4.8	Battery back-up.....	10
4.9	4 to 20mA output models.....	10
5	Operation.....	11
5.1	Normal operation .....	11
5.2	Alarm indications .....	11
6	Maintenance .....	12
6.1	Calibration.....	12
6.2	Alarm checks .....	14
6.3	Adjusting alarm set points.....	15
6.4	Fault conditions.....	15
7	Specifications .....	17
8	Disposal.....	18
9	Declaration of conformity.....	19



## 1 Safety information

Every gas monitor installation should be risk assessed. The correct location of monitor(s) must consider the potential sources of gas leaks and the location of expected human occupation in the area. Where large areas must be monitored, it is often advised that no single monitor should cover a volume in excess of 80m<sup>3</sup>. The installation of more monitors should be considered where an area is complex in shape, filled with obstacles, has a lack ventilation or air circulation, or if there are dead zones where gas can collect

The Ax O2NE™/Safe-Ox™ is designed to be compliant with the following standards: EN61010-1: 2001, IEC61010-1: 2001. It is designed to be safe at least under the following conditions.

- 1) Indoor use
- 2) Altitude up to 1800m
- 3) Temperature 0°C to +40°C
- 4) Maximum relative humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.
- 5) Mains voltage supply fluctuations not to exceed 10% of the nominal voltage
- 6) Impulse withstand (over-voltage) category II of IEC 60364-4-443
- 7) Pollution degree 2
- 8) Mains voltage:-
  - a. 230V AC (Not adjustable - Instrument will be factory set)
  - b. 110V AC (Not adjustable - Instrument will be factory set)
  - c. 24V DC (Not adjustable - Instrument will be factory set)
- 9) Mains power:-
  - a. Less than 5VA – 110V AC and 230V AC versions
  - b. Less than 5W – 24V DC version.
- 10) Mains frequency - 50/60Hz
- 11) The remote alarm repeater has ingress protection to IP43: direct sprays of water up to 60° from the vertical in accordance with EN 60529:1991 + A1. All other units have ingress protection to IP65: low pressure water jets from all directions and totally protected from dust in accordance with EN 60529:1991 + A1.
- 12) Insulation: - Reinforced insulation, class II product according to IEC536.
- 13) Not for use in corrosive or explosive atmospheres
- 14) Not approved for use in vehicles, ships or aircraft

Fuse ratings:-

230V AC, 500mA,	F rating 250V (20mm x 5mm glass cartridge)
110V AC, 500mA,	F rating 250V (20mm x 5mm glass cartridge)
9-24V DC, 200mA,	AS rating 250V (20mm x 5mm glass cartridge)

Battery back-up:-

## **10yr O2NE & Safe-Ox User Manual**

---

The battery back-up is non repairable. Please return faulty units to Analox for refurbishment/replacement.

4 to 20mA (or 0-1V) Output:-

External connected equipment must meet the requirements for reinforced insulation or must be a Safety Extra Low Voltage (SELV) circuit as defined in IEC60950-1.

The above statement refers to the risk of externally connected equipment introducing hazardous voltages into the A50 (O2NE, Safe-Ox or CO Clear). It is the responsibility of users of this product to ensure that their equipment/accessory is safe before connecting it.

NOTE - If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

## 2 Package contents checklist

On receipt of the Ax O2NE™/Safe-Ox™ please check you have the following:

- 1) Ax O2NE™/Safe-Ox™ main unit and alarm repeater
- 2) User manual
- 3) Test certificate
- 4) Rawl plugs and screws for wall mounting
- 5) Drilling template

Any optional items ordered such as:

- 1) Additional alarm repeater's each with 8 metres of interconnecting cable.
- 2) Relay junction box

### **3 Overview**

Two variants of this product are available.

The Ax O2NE™ O2 detector is designed to detect the presence of low oxygen in ambient air.

The Ax Safe-Ox™ O2 detector is designed to detect the presence of high and low oxygen in ambient air.

Instrument Name	Application	Sensor Type
Ax O2NE™	Fixed instrument configured as standard with two depletion alarms, representing warning (19.5%) and danger (18%) levels of oxygen	Partial pressure
Ax Safe-Ox™	Fixed instrument configured as standard with two pre-set alarm levels at 23.0% and 19.5% O2	Partial pressure

#### **3.1 Partial pressure sensor**

This type of sensor measures the partial pressure of oxygen in the atmosphere where the instrument is located. Therefore it is directly affected by fluctuations in atmospheric pressure. To counteract this a pressure compensation sensor is used to compensate for changes in atmospheric pressure.

The oxygen sensor used is not cross sensitive to helium so will measure correctly in the presence of a helium atmosphere. This means that the sensor can be safely used to detect oxygen displacement by helium gas leaks. Care should be taken however, if the Ax O2NE™/Safe-Ox™ is to be permanently exposed to a helium environment, as this can affect the performance of the pressure compensation sensor over time. Contact Analox for installation advice if you intend to use the unit in this way.

#### **3.2 Setup**

Different versions of the instrument allow operation from

- 1) 210/250V AC supply
- 2) 110/120V AC supply
- 3) 9-24V DC supply

The Ax O2NE™/Safe-Ox™ is intended to be used as a permanent installation. It provides a digital readout of oxygen, plus audible and visual alarms to potentially dangerous deficiencies (and abundancies in case of Ax Safe-Ox™) of oxygen in the air surrounding the instrument. The instrument uses an electrochemical cell together with state of the art technology, built in an IP65 splash proof housing and is designed to provide long, trouble free service, with minimum maintenance.

The Ax O2NE™ has two pre-set alarm levels at 19.5% and 18% O2. The alarms are set with a small hysteresis which means the O2 concentration has to rise above the alarm set point before the alarm will cancel.

The Ax Safe-Ox™ has two pre-set alarm levels at 23.0% and 19.5% O2. The alarms are set with a small hysteresis which means the O2 concentration has to fall below the 23.0% alarm setpoint or rise above the 19.5% alarm setpoint before the alarm will cancel.

Optional items fitted to or supplied with the unit may include the following:

- 1) Remote alarm repeater\*
- 2) One or two medium duty relays
- 3) Test gas, flow indicators and control valves\*
- 4) Flow adaptor\*


Items marked with an asterisk (\*) do not need to be specified at the time of order and may be retro fitted



## 4 Installation of the product

### 4.1 Wall mounting

The Ax O2NE™/Safe-Ox™ should be mounted onto a wall at normal working head height using the mounting lugs and drilling template supplied. Use the paper template to drill the 4 required holes in the wall and use the rawl plugs and screws provided to mount the unit. It is not necessary to dismantle the Ax O2NE™/Safe-Ox™ main unit in any way prior to installation. You need to ensure the mains plug, fused at 3 amps, is in easy reach of a power socket.

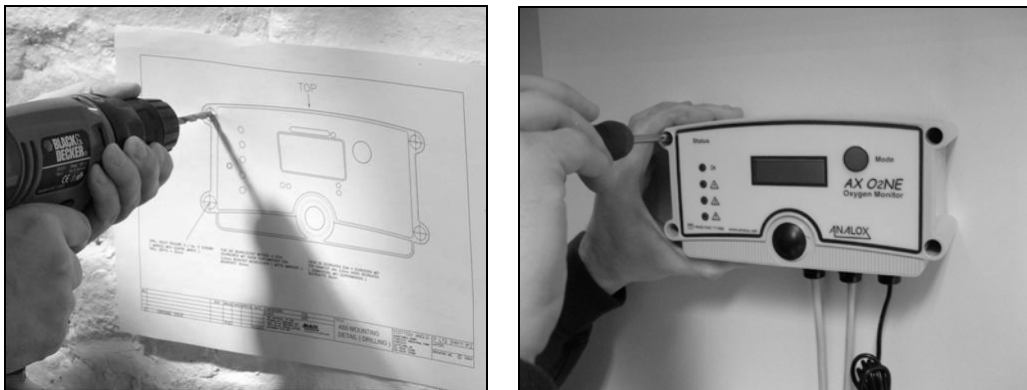

The alarm repeater housing also has wall mounting lugs.

### 4.2 Wiring installation

It is necessary to identify the model of Ax O2NE™/Safe-Ox™ prior to installation. The calibration certificate accompanying each instrument will clearly identify the information required.

\*\*\*

ENSURE THAT THE  
ELECTRICAL SUPPLY TO THE INSTRUMENT  
IS SWITCHED OFF  
WHILST INSTALLING ANY WIRING

\*\*\*

### 4.3 AC supply models

Mains powered Ax O2NE™/Safe-Ox™'s are pre-wired with a mains cable, fitted with a plug suited to the destination country. Where internal plug fuses are fitted, these are 3 amp. Ensure that the unit is connected to the correct supply voltage (i.e. 110 or 230V AC). Where no fuse is fitted in the plug, the instrument should be powered from a 3 amp fused outlet. The Ax O2NE™/Safe-Ox™ is fitted with an internal fuse, which is rated at 500mA.

### 4.4 DC supply models

DC powered Ax O2NE™/Safe-Ox™'s require a DC supply in the range 9-24V DC. A 2m cable is factory fitted to the instrument. The DC supply should be connected to this cable as follows:

- 1) Blue wire negative (0Volts)
- 2) Red wire positive (9 to 24Volts)

### 4.5 Alarm repeaters

The Alarm repeater has four status indicators and a Mode button, which mimic the button and indicators on the main Ax O2NE™/Safe-Ox™ enclosure.

An 8 metre, 8 core cable is pre-wired to the Ax O2NE™/Safe-Ox™ on units to be fitted with an alarm repeater. This ensures that for a basic installation, there is no need to dismantle the Ax O2NE™/Safe-Ox™ main unit. A maximum of three repeaters may be fitted in a daisy chain configuration.

4.5.1 To connect a “Hard Wired” Remote Alarm Repeater

- 1) Disconnect the power supply from the Ax O2NE™/Safe-Ox™.
- 2) Open the Remote Alarm Repeater unit by removing the 4 screws in the front of the case and carefully pulling the case apart. The connecting wires from the Ax O2NE™/Safe-Ox™ pass through one of the cable glands on the Remote Alarm Repeater.
- 3) Terminate the wires in accordance with the table below

REPEATER CABLE COLOURS			Ax 50
Type 1	Repeater Term	Type 2 (Cat 5)	ST1 Terminal No
	<b>8</b>		<b>3</b>
	<b>7</b>		<b>2</b>
	<b>6</b>		<b>4</b>
	<b>5</b>		<b>5</b>
	<b>4</b>		<b>6</b>
	<b>3</b>		<b>7</b>
	<b>2</b>		<b>8</b>
	<b>1</b>		<b>1</b>

- 1) Replace the lid of the Remote Alarm Repeater, insert and tighten the 4 screws, and mount it in the desired position using the 2 fixing lugs.
- 2) Restore power to the Ax O2NE™/Safe-Ox™. Press the switch on the Remote Alarm Repeater once, and ensure that the four indicators flash. Note that in the presence of a genuine alarm, this test feature is disabled.

4.5.2 To connect a “Quick Connect” Remote Alarm Repeater

- 1) Disconnect the power supply from the Ax O2NE™/Safe-Ox™.
- 2) Insert the connector on the end of the wire into either socket on the bottom of the Remote Alarm Repeater.
- 3) Restore power to the Ax O2NE™/Safe-Ox™. Press the switch on the Remote Alarm Repeater once, and ensure that the four indicators flash. Note that in the presence of a genuine alarm, this test feature is disabled.

4.5.3 To connect a “Strobe” Remote Alarm Repeater

- 1) Disconnect the power supply from the Ax O2NE™/Safe-Ox™.

- 2) Open the Remote Alarm Repeater unit by removing the 4 screws in the front of the case and carefully pulling the case apart. The connecting wires from the Ax O2NE™/Safe-Ox™ pass through one of the cable glands on the Remote Alarm Repeater.
- 3) Terminate the wires in accordance with the table below

REPEATER CABLE COLOURS			Ax 50
Type 1	Repeater Term	Type 2 (Cat 5)	ST1 Terminal No
	8		3
	7		*See Note 4
	6		4
	5		5
	4		6
	3		7
	2		8
	1		1


- 4) Connect the free wire (Brown or Orange) to A50-231 main PCB at JP13 terminal 5.
- 3) Replace the lid of the Remote Alarm Repeater, insert and tighten the 4 screws, and mount it in the desired position using the 2 fixing lugs.
- 4) Restore power to the Ax O2NE™/Safe-Ox™. Press the switch on the Remote Alarm Repeater once, and ensure that the four indicators and the LED strobe flash. Note that in the presence of a genuine alarm, this test feature is disabled.

#### 4.6 Alarm relay output models


You may have ordered your Ax O2NE™/Safe-Ox™ with a relay. The relay contacts are 'Volt-Free' single pole changeover, rated 250vAC/30vDC 2 amps. The relay is non-latching. This means the relay will only initiate when gas is present. As standard the relays are setup in a fail-safe configuration. This means that the relay is energised during normal operation. Please note that on power up the relay is only energised after the 10 second start-up period. See below for details of how the relay should be connected.

#### 4.7 Relay wiring

The cable gland is for cables of outside diameter between 5 and 7mm, if cable fitted is outside that range, a suitably specified cable gland must be used. Ensure that the gland is properly tightened. Test that the cable is adequately gripped by the cable gland. Ensure that the cable is suitable for purpose, the load is within the limits of the relay, 240VAC/28VDC, 2 amps, and the insulation of the external circuit meets the requirements for basic insulation 240VAC/28VDC, 2 amps. After completing wiring, ensure that the terminal box cover is securely replaced.

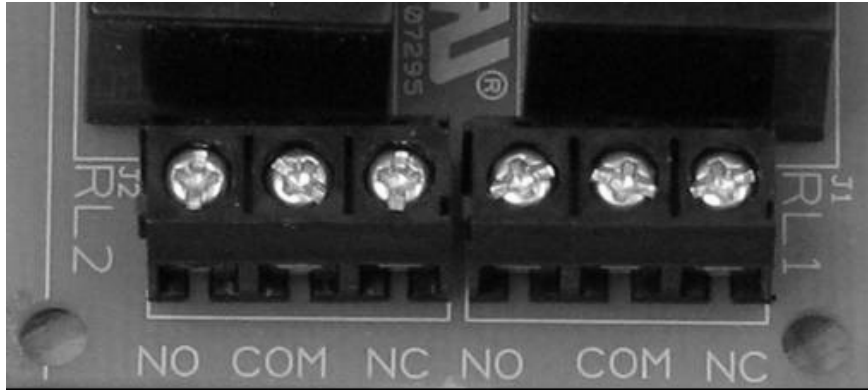

RELAY TERMINAL BOX TERMINATIONS

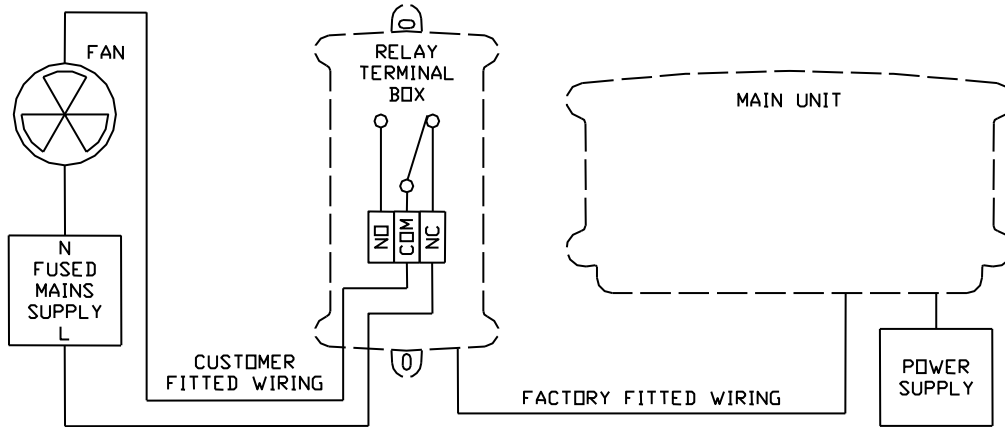


#### 4.8 Battery back-up

When this option is fitted the Ax O2NE™/Safe-Ox™ should remain powered for at least 30 hours to ensure the battery back-up is fully charged and will provide back-up power for a minimum of 4 hours in the event of mains power failure.

#### 4.9 4 to 20mA output models

You may have ordered your Ax O2NE™/Safe-Ox™ with a 4 to 20mA output. A 2m cable is factory fitted to the instrument. The 4 to 20mA output current is generated by the instrument. The customer system should be connected to this cable as follows and as per the following drawing:

- 1) Blue wire 4 to 20mA negative
- 2) Red wire 4 to 20mA positive

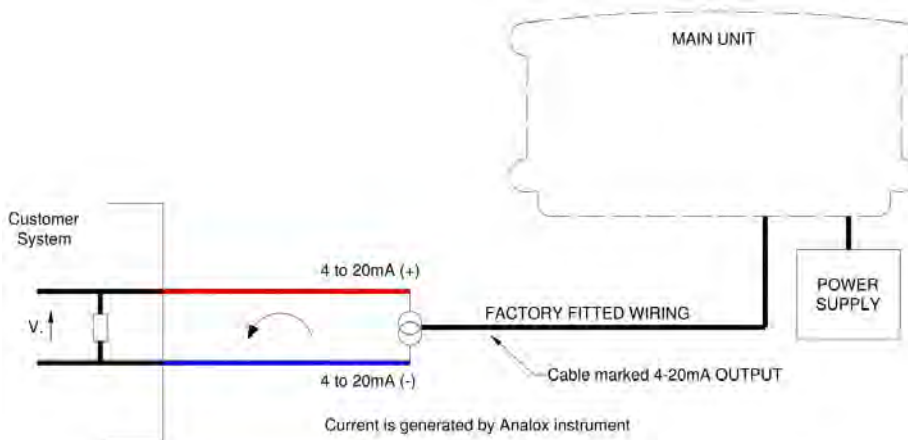

## 5 Operation

### 5.1 Normal operation

When the Ax O2NE™/Safe-Ox™ is turned on it will take approximately 10 seconds to start-up. During this period, the 'Good/OK' and 'Fault' status indicators will be turned on. After the initial start-up period has expired, the 'Fault' status indicator will turn off. The 'Good/OK' status indicator will be illuminated and flash off briefly every few seconds, indicating normal operation. The status indicators on any alarm repeaters will mimic this operation. On display models the display will briefly read '8.8.8.8' on power up before reverting to the O2 reading.

Momentarily pressing the 'Mode' button on either the Ax O2NE™/Safe-Ox™ or any alarm repeaters, in the absence of any alarm conditions, causes an alarm test to be performed. The indicator lamps will flash 4 times and the buzzer will sound.

In all circumstances the alarm repeater will mimic the status indications and buzzer of the main unit.

Units fitted with relays are configured such that relays may operate in conjunction with Alarm1 or Alarm2. By default they are set to be energised in the absence of alarms, and de-energised in the presence of alarms. They may be factory configured in the opposite sense if required.

### 5.2 Alarm indications

#### 5.2.1 Ax Safe-Ox™

If the Ax Safe-Ox™ detects an O2 concentration which is greater than the high alarm level, then the 'Alarm 1' indicator will begin to flash and the buzzer will sound at its slow speed.

If the measured concentration of O2 falls below the low alarm level, then the 'Alarm 2' indicator will begin to flash and the buzzer will sound at its medium speed.

On standard units the alarms are self-cancelling when the O2 concentration returns to a level within the alarm thresholds. Alternatively, latched alarm versions are available, on which the alarm conditions will be maintained until the 'Mode' switch has been pressed to accept the alarm, and the gas concentration has returned to a level within the alarm thresholds.

#### 5.2.2 Ax O2NE™

If the Ax O2NE™ detects an O2 concentration which is less than the first alarm level, then the 'Alarm 1' indicator will begin to flash and the buzzer will sound at its slow speed.

If the measured concentration of O2 continues to fall below the second alarm level, then the 'Alarm 2' indicator will begin to flash and the buzzer will sound at its medium speed. The 'Alarm 1' indicator will continue to flash.

On standard units the alarms are self-cancelling when the O2 level rises above the alarm limits. Alternatively, latched alarm versions are available, on which the alarm conditions will be maintained until the 'Mode' switch has been pressed to accept the alarm, and the gas level has risen above the alarm threshold.

## 6 Maintenance

### 6.1 Calibration

Note: Gases used on the Ax O2NE™/Safe-Ox™ must be manufactured to a  $\pm 2\%$  tolerance.

Note: For best performance the monitor should be powered and allowed to warm-up for approximately 2 hours before calibration is performed. This will allow the whole instrument to stabilise at its operating temperature.

#### 6.1.1 Quick calibration check

A quick calibration check should be performed on the Ax O2NE™/Safe-Ox™, when it is first installed, then at no greater than 18 monthly intervals. This ensures that the sensor is giving an accurate oxygen reading.

In order to perform a calibration check, you will need the following equipment:

- 1) A test gas cylinder containing 100% nitrogen – Part No: SA7L2001
- 2) Test Gas with 24% Oxygen in Nitrogen/helium,  $\pm 2\%$  tolerance  
110l 24% oxygen balance nitrogen – SA7L110150  
110l 24% oxygen balance helium – SA7L110165
- 3) Fine control valve - Part No: SA7FLOWIN
- 4) Flow adaptor kit - Part No: P0120-651K

Then follow the procedure:

- 1) Remove the flow adaptor and gasket from its protective backing.



- 2) Fit the flow adaptor including its gasket to the O2 sensor and connect, with tubing, the cylinder and set the fine control valve to half scale allowing the gas to flow over the sensor.



- 3) When the display reading settles at 24%  $\pm$ 1%, press the 'Mode' button for 2 seconds. On releasing the button there should be a confirming beep. The Ax O2NE™/Safe-Ox™ is calibrated.



If the confirming beep is not heard, or the display reading does not settle between 23% and 25% you need to carry out a full calibration as described in Section 6.1.2.

If the beep is repeated and the LEDs on the unit flash intermittently on releasing the button, this indicates an internal fault and the unit requires repair. Contact Analox in this instance.

#### 6.1.2 Full calibration check

A full calibration check should be performed on the Ax O2NE™/Safe-Ox™, when it fails to calibrate using the quick calibration check.

Note: Gases used on the Ax O2NE™/Safe-Ox™ must be manufactured to a  $\pm$ 2% tolerance.

Note: For best performance the monitor should be powered and allowed to warm-up for approximately 2 hours before calibration is performed. This will allow the whole instrument to stabilise at its operating temperature.

In order to perform a calibration check, you will need the following equipment:

- 1) Test Gas with 24% oxygen in nitrogen/helium,  $\pm$ 2% tolerance
- 2) Fine control valve - Part No: SA7FLOWIN
- 3) Flow adaptor kit - Part No: P0120-651K

Then follow the procedure:

- 1) Remove the flow adaptor and gasket from its protective backing.
- 2) Fit the flow adaptor including its gasket to the O2 sensor and connect, with tubing, the cylinder and set the fine control valve to half scale allowing the gas to flow over the sensor
- 3) Enter Technician Mode by pressing the mode switch 3 times. If entered successfully the green LED will flash off for 1.5 seconds and on for 0.5 of a second.
- 4) Select auto calibration by pressing the mode switch 4 times. The 2 Red Alarm LED's will light up to show you are now in this mode.
- 5) Press the mode switch 2 times to start the Auto Calibration, the Red Alarm LED's will turn off and the Green LED will continue to flash.
- 6) Wait one minute for the instrument to adjust. When the instrument has a new calibration value, the buzzer will sound one bleep and all the LED's will be off.

- 7) Accept this new calibration value by pressing the mode switch 2 times. The green LED will flash to show the instrument has accepted the new oxygen value.

To return to normal operation, press the mode switch once. The LED's and buzzer will illuminate / sound 4 times before returning to normal operation.

If, during the one minute wait period, the red or amber LED's are illuminated consult the table below.

ALARM1 LAMP (RED)	ALARM2 LAMP (RED)	FAULT LAMP (YELLOW)	MEANING	ACTION
ON	OFF	OFF	Calibration gas is above allowable range	Ensure the calibration gas is 24% oxygen in nitrogen/helium with +/-2% tolerance
OFF	ON	OFF	Calibration gas is below allowable range	Ensure the calibration gas is 24% oxygen in nitrogen/helium with +/-2% tolerance
OFF	OFF	ON	Internal fault	Contact Analox.

Note: If at any time you send the wrong instruction and would like to abort, press the mode switch once and wait 20 seconds, this should bring you back to technician mode. Press the mode switch once again, this should bring you back to normal operation, the LED's and buzzer will illuminate/sound 4 times. Alternatively, disconnect the power supply to the Ax O2NE™/Safe-Ox™, wait a moment and re-connect power.

## 6.2 Alarm checks

To verify that the indicators and the audible alarms are working, press the Mode switch on the Ax O2NE™/Safe-Ox™ or any of its repeaters. The indicators and the audible alarm will pulse four times.

To verify that the alarm levels are correctly set, you will need the following equipment:

- 1) A test gas cylinder containing 100% nitrogen – Part No: SA7L2001
- 2) Test gas with 24% oxygen in nitrogen/helium, +/-2% tolerance
- 3) Fine control valve - Part No: SA7FLOWIN
- 4) Flow adaptor kit - Part No: P0120-651K

Then follow the procedure for the particular instrument type:

### 6.2.1 Ax O2NE™

- 1) Fit the flow adaptor including it's gasket to the O2 sensor and connect, with tubing, the 100% nitrogen cylinder and set the fine control valve to half scale allowing the gas to flow over the sensor.
- 2) After a few moments, the 'Alarm 1' alarm should operate, followed a little later by the 'Alarm 2' alarm.
- 3) Remove the test gas. It will take a little while for the N2 mixture to diffuse out of the instrument sensor, allowing the unit to recover to its normal non-alarm condition.



#### 6.2.2 Ax Safe-Ox™

- 1) Fit the flow adaptor including its gasket to the O2 sensor and connect, with tubing, the 100% nitrogen cylinder and set the fine control valve to half scale allowing the gas to flow over the sensor.
- 2) After a few moments, the 'Alarm 2' alarm should operate.
- 3) Remove the test gas. It will take a little while for the N2 mixture to diffuse out of the Instrument Sensor, allowing the unit to recover to its normal non-alarm condition.
- 4) Fit the flow adaptor to the O2 sensor and connect, with tubing, the 24% oxygen cylinder and set the fine control valve to half scale allowing the gas to flow over the sensor.
- 5) After a few moments, the 'Alarm 1' alarm should operate.
- 6) Remove the test gas. It will take a little while for the mixture to diffuse out of the instrument sensor, allowing the unit to recover to its normal non-alarm condition.

### 6.3 Adjusting alarm set points

The procedure is very similar for setting either Alarm 1 or Alarm 2.

- 1) Whilst the O2NE™/Safe-Ox™ is switched on, enter technician mode by pressing the mode switch 3 times. If entered successfully the green LED will flash off for 1.5 seconds and on for 0.5 of a second.
- 2) From technician mode, press the 'Mode' switch 2 times to set Alarm 1 or 3 times to set Alarm 2. The buzzer will bleep on each press. If this is done successfully, the instrument will show the 'Fault' indicator and the appropriate 'Alarm' indicator. If this is done inadvertently, or if another mode is selected, press the 'Mode' switch once to return to technician mode and then repeat this selection.
- 3) The display will indicate the present value of the alarm.
- 4) Press the 'Mode' switch twice to proceed to define a new setting, or once to abort and return to technician mode.
- 5) Press and hold the 'Mode' switch. The displayed value will count down at approximately one count per second. Release the switch when the displayed value is equal to the desired alarm value.
- 6) Upon release of the 'Mode' switch, the display will continue to show the new value. Accept the new setting by pressing the 'Mode' switch twice, or alternatively ignore the new setting by pressing the switch once. This will return to the technician mode.
- 7) To exit from technician mode, press the Mode switch once. The O2NE™/Safe-Ox™ then restarts by performing the normal power on sequence (4 flashes).

### 6.4 Fault conditions

During normal operation, the instrument carries out a continuous self-test procedure. If operation is satisfactory, the 'Good/OK' status indicator will be on, blinking off momentarily every few seconds.

- 1) If there are no indicator lamps lit on the O2NE™/Safe-Ox™, check that power is connected and that the fuses are OK.
- 2) If the 'Good/OK' indicator is off, and the alarm indications are believed to be incorrect, carry out a quick calibration. If this fails to correct the problem contact your qualified service engineer.

A summary of the indicator lamps and buzzer operations is shown in the following tables.

6.4.1 Ax O2NE™

OK LAMP (GREEN)	ALARM1 LAMP (RED)	ALARM2 LAMP (RED)	FAULT LAMP (YELLOW)	MEANING
OFF	OFF	OFF	OFF	Power Off
ON/ BLIP OFF	OFF	OFF	OFF	Normal Operation
OFF	FLASHING AND SLOW BUZZER	OFF	OFF	O <sub>2</sub> Level is < 19.5% †
OFF	FLASHING	FLASHING AND MED. BUZZER	OFF	O <sub>2</sub> Level is < 18% †
OFF	OFF	OFF	FLASHING AND SLOW BUZZER	Calibration Error at Switch On ‡
OFF	FLASHING	OFF	FLASHING AND FAST BUZZER	O <sub>2</sub> Cell Fault Output too High
OFF	FLASHING ♦	FLASHING ♦	FLASHING AND FAST BUZZER	O <sub>2</sub> Cell Fault Output too Low
OFF	OFF	OFF	FLASHING AND VERY FAST BUZZER	Internal system fault contact Analox

† Note that alarm levels may be set at different values, depending on customer requirement

‡ A calibration error or a cell fault requires the attention of a service engineer. A recalibration procedure may overcome the problem.

♦ Only when Alarm 1 and Alarm 2 are enabled.

6.4.2 Ax Safe-Ox™

OK LAMP (GREEN)	ALARM1 LAMP (RED)	ALARM2 LAMP (RED)	FAULT LAMP (YELLOW)	MEANING
OFF	OFF	OFF	OFF	Power Off
ON/ BLIP OFF	OFF	OFF	OFF	Normal Operation
OFF	FLASHING AND SLOW BUZZER	OFF	OFF	O <sub>2</sub> Level is > 23.0% †
OFF	FLASHING	FLASHING AND MED. BUZZER	OFF	O <sub>2</sub> Level is < 19.5% †
OFF	OFF	OFF	FLASHING AND SLOW BUZZER	Calibration Error at Switch On ‡
OFF	FLASHING	OFF	FLASHING AND FAST BUZZER	O <sub>2</sub> Cell Fault Output too High
OFF	FLASHING ♦	FLASHING ♦	FLASHING AND FAST BUZZER	O <sub>2</sub> Cell Fault Output too Low
OFF	OFF	OFF	FLASHING AND VERY FAST BUZZER	Internal system fault contact Analox

† Note that alarm levels may be set at different values, depending on customer requirement

‡ A calibration error or a cell fault requires the attention of a service engineer. A recalibration procedure may overcome the problem.

♦ Only when Alarm 1 and Alarm 2 are enabled.

## 7 Specifications


O <sub>2</sub> range	0.1 to 25%	
Sensor accuracy	Better than $\pm 0.75\%$ O <sub>2</sub> over 5.0 to 25.0% O <sub>2</sub> Better than $\pm 1.00\%$ O <sub>2</sub> over 0.1 to 5.0% O <sub>2</sub>	
Response time (T <sub>90</sub> )	60 Seconds	
Operating temperature	0 to 40°C	
Temperature effect	0.2% Reading/°C	
Atmospheric pressure range	811 to 1050mbar absolute	
Warm up time	10 seconds to normal operation Prior to calibration allow 2 hours to achieve full accuracy.	
Weight (without cables)	O <sub>2</sub> NE™/Safe-Ox™	600g
	Alarm Repeater	150g
Dimensions	O <sub>2</sub> NE™/Safe-Ox™	175x105x75 mm
	Alarm Repeater	155x72x45 mm
IP rating	O <sub>2</sub> NE™/Safe-Ox™	IP65
	Alarm Repeater	IP43
Sensor type	Electro-Chemical Cell	
Display	4 digit Liquid Crystal Display	
Alarms	2 x Alarm Visual Indicators 1 x System Fault Indicator 1 x Status Indicator Common Audible Alarm	
Relays	One or Two Optional Alarm Relays with changeover contacts assigned to Alarm 1, Alarm 2 or System Fault. Contact Rating 230V AC or 30V DC at up to 2A. Contacts are non-latching Fail-Safe.	
Output	2 wire, 4 to 20mA (Max load 150 $\Omega$ )	
Power supply options	a) 210/250V A.C. supply b) 110/120V A.C. supply c) 9-24V DC supply	

## 8 Disposal



According to WEEE regulation this electronic product cannot be placed in household waste bins. Please check local regulations for information on the disposal of electronic products in your area.

9 Declaration of conformity

Manufacturers name:	Analox Ltd
Manufacturers address:	15 Ellerbeck Court Stokesley Business Park Stokesley North Yorkshire TS9 5PT
It is declared that the following product:	
Product name:	Ax O2NE / Ax Safe-Ox
Product code:	AA1
Conforms to all applicable requirements of:	EN50270:1999 EN61000-6-3:2001+A11:2004 BS EN 61010-1:2001 IEC 61010-1(2ed) AS61610.1-2003 (Australia & New Zealand)
The above product complies with the requirements of the EMC Directive 89/336/EEC, as amended.	
The above product complies with the requirements of the Low Voltage Directive 73/23/EEC, as amended.	
The above product is approved for use in Europe, CB Test Certificate NO44944	
The above product complies with the Australian and New Zealand EMC requirements for C-Tick marking	
Signed on behalf of:	Analox Ltd
Date:	01/06/2012
Signed:	
Name:	Mark Lewis
Position:	Managing Director



